


NOTES:

1. REMOVE ALL POTS AND WIRE AND CUT CONTAINER CLEANLY WAY FROM ROOTS.
2. REMOVE BURLAP FROM TOP HALF OF ROOT BALL.
3. CONTAINER PLANTINGS MAKE 4 TO 5 VERTICAL CUTS TO THE ROOT BALL BEFORE SETTING IN PLACE.
4. PRUNE ALL DAMAGED, DISEASED, OR WEAK LIMBS AND ROOTS.
5. CLEANLY PRUNE ALL DAMAGED ROOT ENDS TEASE ROOTS OF CONTAINER GROWN STOCK.
6. DO NOT ALLOW ROOTS TO DRY OUT DURING INSTALLATION PROCESS.
7. DEEP WATER AFTER PLANTING.

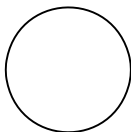

LANDSCAPE SHRUB

N. T.S.



The Maryland-National Capital Park and Planning Commission
Montgomery County Department of Parks

Detail No.

OCTOBER 2007